


Changing the IP address from the keypad of a 4G V-Station unit

Get into the unit by pressing the left arrow and enter button at the same time, the default password is 4 zero's.(0000)


Arrow to the communication Icon



Click Enter

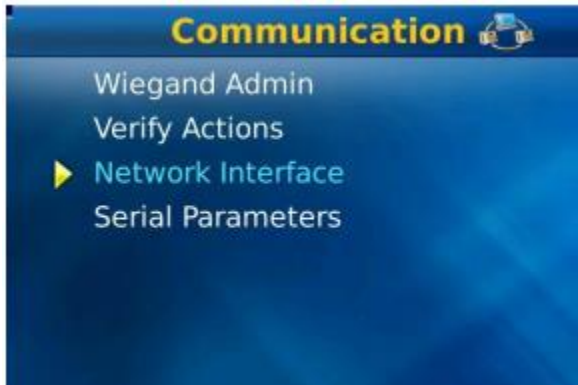


Click Enter

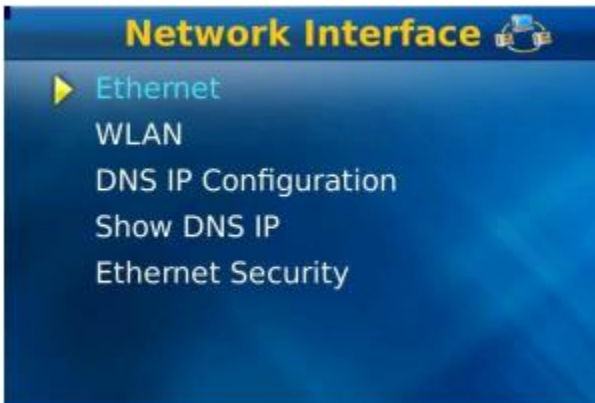


Click Enter




Click enter

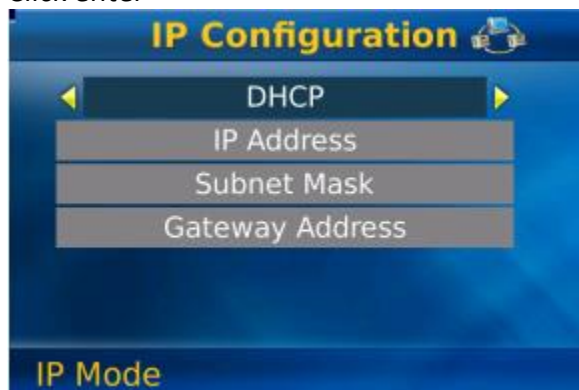

Use left or right arrow for static or DHCP

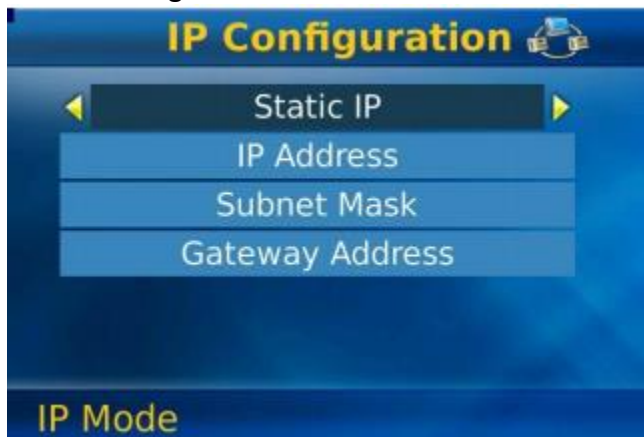

Left arrow to remove IP address, right arrow to put in a periods

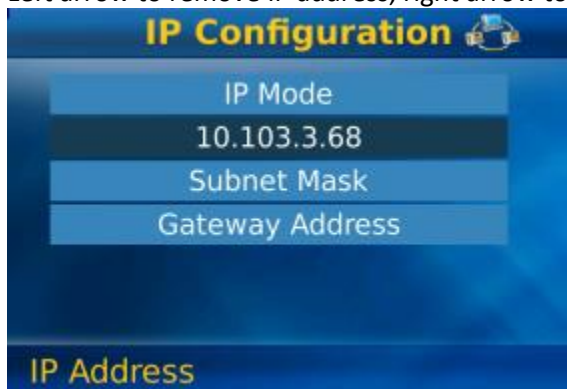

Arrow down for Subnet mask complete by hitting enter



Arrow down for gateway address complete by hitting enter

