

To enroll right at the 4G Prox unit using a command card

You need to first create a command card.

Do an enrollment with prox card via Secure Admin.

In the Template change the User type to Prox Enroll ID

Complete the enrollment.

Edit Enrollment

User

First Name: Vince Company: Demo Company

Middle Name: Site: Demo Site

Last Name: Sartor Department: Demo Department

User Group: Device User Save

Template User Data

Template ID: 60240 User Type: Prox Enroll ID

Index: 0 Password: [] Password: []

Template Name: Vince Sartor Access Schedule: 0: No Access Schedule

Employee ID: 0 Observe Holidays: [] Write Wiegand String: []

Extended ID: []

Biometric Data

Fingerprint Data

1:1 Security: None

1:N Security: Medium

Activate Duress Finger Mode: []

Finish Close

Now that you have created a command card

Present the command card to the reader you need to verify with fingerprint that was enrolled with.

- The reader LED's will flash
- Present new prox card
- Reader will stop flashing
- Present finger to reader until the reader beeps
- The reader now has taking your fingerprint and stored it in the reader
- You can enroll a second finger with this method with the same card number.

To delete enroll person right at reader using a command card

Using Secure Admin created a Prox delete ID

Edit Enrollment

Drag the cursor around the area you want to capture.

User

First Name: Vince Company: Demo Company

Middle Name: Site: Demo Site

Last Name: Sartor Department: Demo Department

User Group: Device User Save

Template User Data

Template ID: 797 User Type: Prox Delete ID

Index: 0 Password:

Template Name: Vince Sartor Access Schedule: 0: No Access Schedule

Employee ID: 0 Observe Holidays: Write Wiegand String:

Extended ID:

Biometric Data

Fingerprint Data

1:1 Security: Medium

1:N Security: Medium

Activate Duress Finger Mode

Finish Close

Present the command card to the reader you need to verify with fingerprint that was enrolled with

- The reader LED's will flash
- Present prox card user that you want to delete
- Reader will beep once
- Prox card user is deleted