

# MorphoManager

---

BioBridge  
Paxton Net2  
Quick Start Guide

---



## Table of Contents

Introduction.....	3
Support .....	3
Setting up BioBridge .....	4
Prerequisites .....	4
Wiegand Profiles.....	4
Biometric Device Profile .....	5
Biometric Device(s).....	6
User Policy .....	7
User Distribution Groups .....	8
BioBridge System Configuration .....	9
Using the BioBridge Enrollment Client .....	12
Toolbar.....	12
Enroll.....	12
Edit.....	13
Encode Card.....	13
Filter.....	13
Refresh.....	13
Search Field.....	14
Data Grid.....	14
Embedded enrollment setup .....	15
Adding the “Enroll Biometrics” button to Paxton .....	15
Options for the Enrollment Application.....	15
Enrolling a user into MorphoManager via Paxton Net2 .....	16

## Introduction

BioBridge is an enrollment and synchronization middleware that overlays enrollment and demographic synchronization between MorphoManager and third party data sources. The infrastructure is extensible and supports interfacing to multiple third party systems (one at a time) by the implementation of an interface. BioBridge is not dependent on the underlying technology platform required for integration.

BioBridge supports the following version of Paxton Net2:

- 4.28
- 5.04

## Support

Please contact your installer for additional support.

## Setting up BioBridge

The following areas of MorphoManager will need to be configured as part of Paxton Net2 BioBridge setup:


- Wiegand Profiles
- Biometric Device Profiles
- Biometric Device
- User Policy
- User Distribution Group
- BioBridge System Configuration

### Prerequisites

Please ensure that you have the Paxton Net2 SDK redistributable installed before continuing. This can be downloaded at <http://www.paxton.co.uk/spotlight.asp?strStage=SDK>

It is only necessary to install RedistoOEM.

### Wiegand Profiles

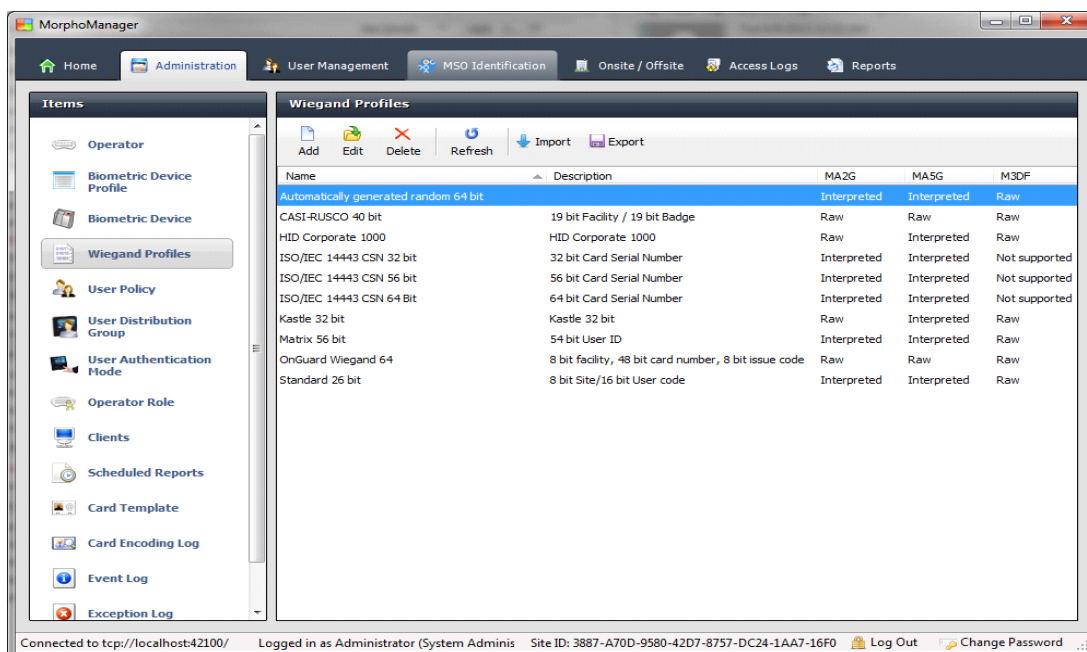

Wiegand Profiles define what information is output over the Wiegand Out interface of the Morpho Biometric Devices when a user is identified. This is most typically used in conjunction with an Access Control System.

- From Administration tab select Wiegand Profile
- Click **Add** button to create a custom Wiegand profile.

The Wiegand formatting used can vary from system to system, but some common formats are pre-configured in MorphoManager



The actual setting of the Wiegand Profile from this list will be done at the User Policy and Biometric Device Profile Level. Please refer to those sections for further details.

## Biometric Device Profile

The Biometric Device Profile will define common settings and parameters for one or more biometric devices. This profile can be applied when adding units into the system from the Biometric Device section of Administration.

- From Administration tab select Biometric Device Profile.
- Click **Add** button to create a new Biometric Device Profile.

The screenshot shows the MorphoManager web interface. The left sidebar contains a navigation menu with the following items: Operator, Biometric Device Profile (selected), Biometric Device, Wiegand Profiles, User Policy, User Distribution Group, User Authentication Mode, Operator Role, Clients, Scheduled Reports, Card Template, Card Encoding Log, Event Log, and Exception Log. The main content area is titled 'Adding Biometric Device Profile' and contains the following fields and options:

- Name:** A text input field.
- Description:** A text input field.
- Configuration Mode:** A dropdown menu set to 'Express'.
- Realtime logging enabled:** A checkbox, currently unchecked.
- Log retrieval interval:** A text input field set to '300' with '(seconds)' next to it.
- Display name encoding code page:** A dropdown menu set to 'Western Europe (Default) (ISO-8859-1)' with '(Applicable to MA500 series only)' next to it.
- Duplicate check on biometrics:** A checkbox, currently unchecked. Below it is a note: '(MA 100, MA 1, MA 500, MA VP, MA Sigma, MA Sigma Lite, MA Sigma Lite+, and MorphoWave only. Only applicable to new user adds or rebuild)'. This note is only visible when the checkbox is checked.
- MorphoAccess heartbeat interval:** A text input field set to '30' with '(seconds)' next to it.
- MA Sigma, MA Sigma Lite, MA Sigma Lite+ Only Settings:** A section header.
- Allow Remote Enrollment:** A checkbox, currently unchecked.
- Default User Policy for Remote Enrollment:** A dropdown menu set to 'Default'.

At the bottom of the form are four buttons: 'Back', 'Next', 'Finish' (with a green checkmark), and 'Cancel' (with a red X).

The status bar at the bottom of the browser window shows: 'Connected to tcp://localhost:42100/ Logged in as Administrator (System Admini: Site ID: B45E-4B3F-2A3F-4FD1-BD85-58AA-2986-32BB Log Out Change Password ...

In order to create the most basic profile utilizing biometrics stored on the devices that can be used, simply give the profile a name and click **Finish**. Please reference the MorphoManager User Manual for more detail on all the various properties that can be assigned to a Biometric Device Profile including the use of smartcards.




If you plan on using a Wiegand Profile, you will need to set the Wiegand Profile for the Biometric Device(s) here. The Wiegand Profile you choose for your devices must marry to the one being utilized for your users set in the User Policy section of this guide.


## Biometric Device(s)

A Biometric Device is the device used to verify users and allow access to doors. They record a log of every attempt to gain access. MorphoManager is used to manage user’s access to Biometric Devices.

- From Administration tab select Biometric Device.
- Click **Add** button to create a new Biometric Device.
- Enter the details for the device including the Hardware Family the device falls into, the IP address, and the Biometric Device Profile.

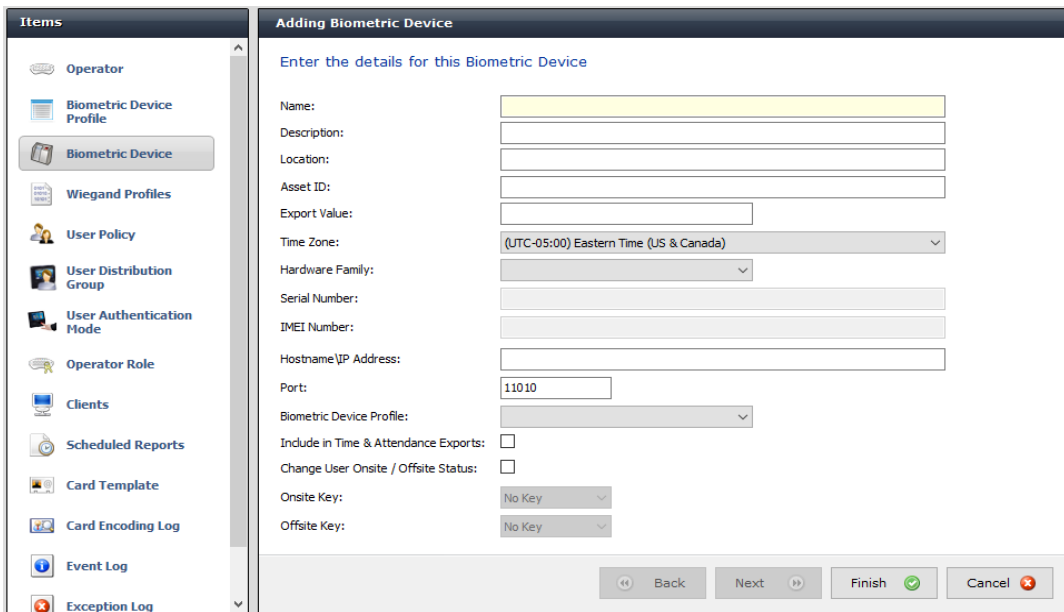

- Once the required details are entered click **Finish**.
- Below is a screenshot of how the Biometric Device Screen looks after the configuration and the devices are online.

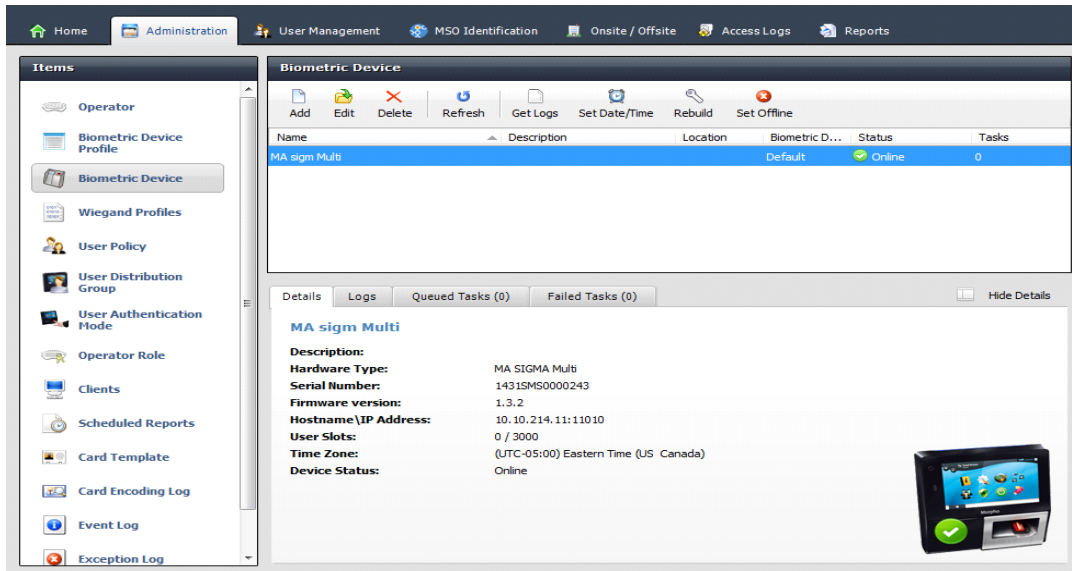

## User Policy

User policies are used to apply access rights and rules to all members of the group.

To Configure BioBridge, MorphoManager's User Policy with an Access Mode "Per User" must be selected.

This will create User Distribution Groups (groups of Biometric Devices) that can place the enrolled user into specific devices.

- From Administration tab select User Policy.
- Click **Add** button to create a new User Policy.

**Adding User Policy**

Enter the details for this User Policy

Name:

Description:

Access Mode: All Biometric Devices and Clients ▼  
 Allow MA 500 database selection during user enrollment

Time Mask Mode: 24 Hours, 7 Days a Week ▼

Extended User Details:  Display extended user details

Wiegand Profile: Automatically generated random 64 t ▼

User Authentication Mode: Biometric (1:Many) ▼

Wave Enrollment Minimum Hands: None ▼

Finger Biometric Enrollment Minimum Fingers: Two ▼

Preferred Finger One: Left Index Finger ▼

Preferred Finger Two: Right Index Finger ▼

Preferred Duress Finger: Left Middle Finger ▼

Show Photo Capture Page:

Show Wave Biometric Capture Page:

Show Finger Biometric Capture Page:  (User Authentication Mode requires templates)



If you plan on using a Wiegand Profile, you will need to set it here in order for the users enrolled in this User Policy to have a particular Wiegand Profile. The Wiegand Profile you choose for your users must marry to the one you utilize for your biometric access devices set in the Biometric Device Profile section of this guide.

The default User Policy will be set to utilize an authentication mode of Biometric (1: Many). To utilize another authentication mode (such as encoding smartcards) additional User Policies can be created.


Please reference the MorphoManager User Manual for more detail on all the various properties that can be assigned to a User Policy including Wiegand Profile, Finger Biometric Enrollment Minimum, Fingers, Access Modes and User Authentication Modes.

## User Distribution Groups

User Distribution Groups are designed to distribute users onto groups of MA readers or MorphoManager Clients. In order to be utilized the user must be in a User Policy that has its Access Mode set to “Per User”. Then the User Distribution Groups will be selectable when creating (or editing) a user.

- From Administration tab select User Distribution Group.
- Click **Add** button to create a new User Distribution Group.

Below is the screenshot where group will only be placing users on one of the three devices installed on the system.

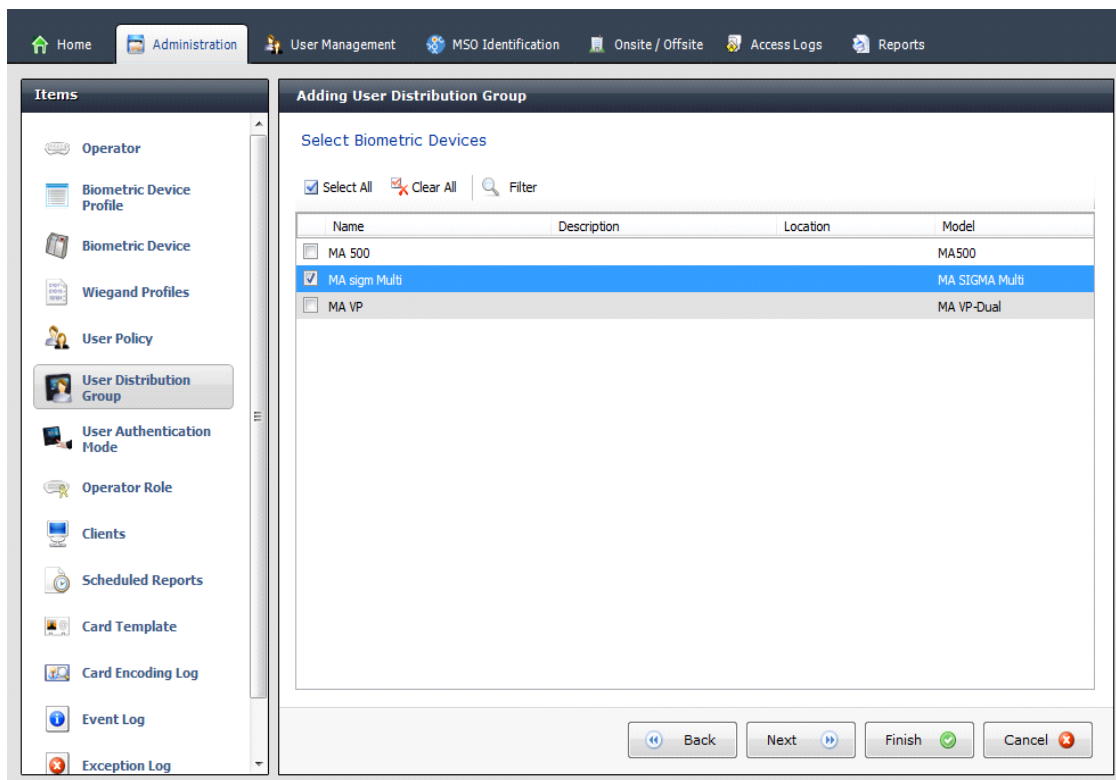



## BioBridge System Configuration

The last step in the process is to configure BioBridge specifications to Net2.

From Administration, select System Configuration.  
 Select the BioBridge Tab in System Configuration.

The screenshot shows the 'System Configuration' window with the 'BioBridge' tab selected. The 'MorphoManager BioBridge Settings' section is visible, containing the following fields and options:

- System:** Paxton Net2 (dropdown menu) with a 'Configure connection' button.
- Wiegand Profile / Token Type:** Keyfob (dropdown menu).
- Departments Mode:** Manual (dropdown menu).
- Enable Forced User Policy:**  Enabled
- Forced User Policy:** Default (dropdown menu).
- User Synchronization Start Time:** 12:00 AM (time picker).
- User Synchronization End Time:** 11:59 PM (time picker).
- Delay Between Each User Synchronization (ms):** 50 (spin box).
- Allow User Sync While User Cache Is Refreshing:**  Enabled
- User Cache Schedule:** A grid of checkboxes for days and times:
 

<input checked="" type="checkbox"/> Sunday	<input checked="" type="checkbox"/> Monday	<input checked="" type="checkbox"/> Tuesday	<input checked="" type="checkbox"/> Wednesday
<input checked="" type="checkbox"/> Thursday	<input checked="" type="checkbox"/> Friday	<input checked="" type="checkbox"/> Saturday	
<input checked="" type="checkbox"/> 12:00 AM	<input checked="" type="checkbox"/> 1:00 AM	<input checked="" type="checkbox"/> 2:00 AM	<input checked="" type="checkbox"/> 3:00 AM
<input checked="" type="checkbox"/> 4:00 AM	<input checked="" type="checkbox"/> 5:00 AM	<input checked="" type="checkbox"/> 6:00 AM	<input checked="" type="checkbox"/> 7:00 AM

At the bottom right of the window are 'Save' and 'Cancel' buttons.

**System:** From the System drop down menu choose Net2 and click the **Configure connection** button. A BioBridge connection box window will pop up. Fill in all the required fields and click OK.

The screenshot shows the 'BioBridge Paxton Net2 Connection' dialog box with the following fields:


- Server:**
  - Net2 Server:** (text input field)
  - Port:** 8025 (spin box)
- Logon details:**
  - Please enter the Net2 logon credentials below.
  - Username:** (text input field)
  - Password:** (text input field)

At the bottom are 'OK' and 'Cancel' buttons.


**Wiegand Profile:** Select the Wiegand format in use from the drop down menu.

**Grouping Level Mode:** This setting determines how MorphoManager should map Net2 users into MorphoManager User Distribution Groups.

**Automatic:** This mode will automatically match Access Level groups from Net2 to the ones created in MorphoManager User Distribution Group if they have the same naming convention.

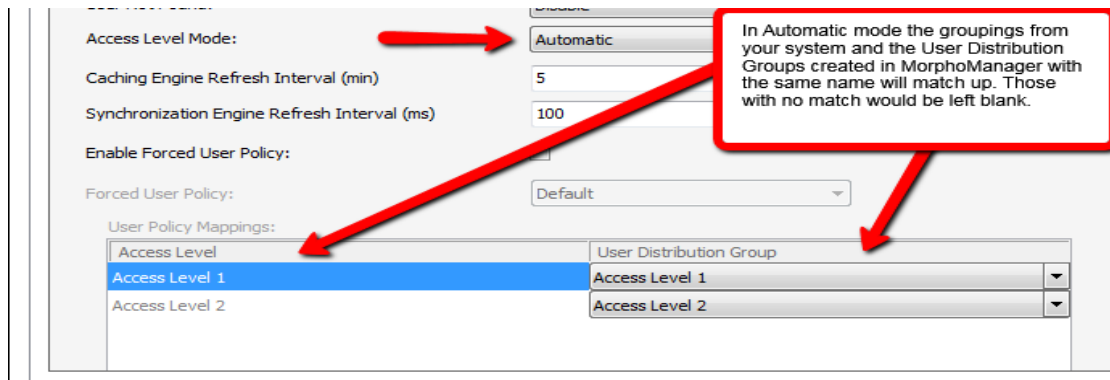

**Manual:** If the Access Level grouping names of Net2 and the User Distribution Group(s) created in MorphoManager are not the same, then selecting which Net2 Access Level maps to which MorphoManager User Distribution Group can be done manually in the User Policy Mappings.

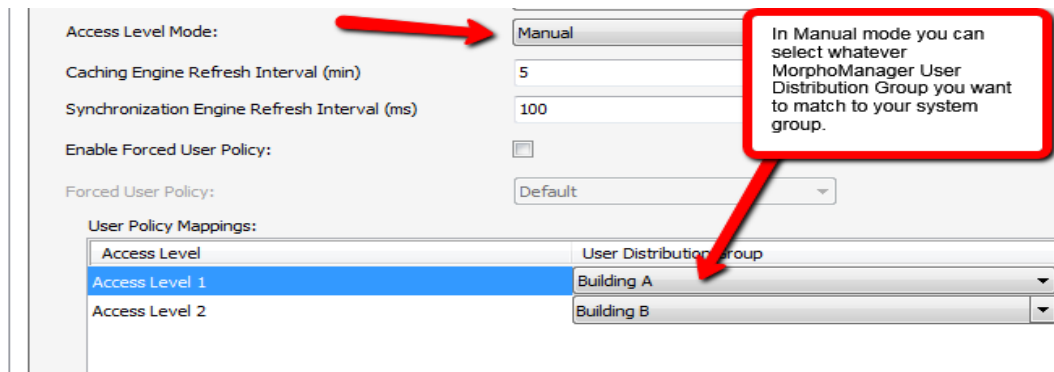

For basic setups, the following settings do not require any changes:

### Enable Forced User Policy

By activating this feature, you can select a User Policy from the drop down menu. The 3<sup>rd</sup> party user will automatically be placed in this User Policy during the enrollment process started in the BioBridge Enrollment Client. The User Policy selected here must be a “Per User” access mode policy.

### User Synchronization Start Time and End Time

The user synchronization engine will only be permitted to run in this time frame.

**Delay between Each User Synchronization**

The duration that the User Synchronization Engine will sleep between each user sync. Increase the delay time to use less system resources, but this will also extend the time it takes for all the users to be updated.

**Allow User Sync While User Cached Is Refreshing**

When enabled, the User Synchronization engine will run in parallel to the User Cache Refresh. This is very taxing on system resources. It is recommended to disable this setting when using large databases.

**User Cache Refresh Schedule**

The specified times when the user cache refresh may start. The ideal schedule would be 24/7, but this is not always possible with large databases.

## Using the BioBridge Enrollment Client


After configuring BioBridge you will now utilize the BioBridge Enrollment Client. This client will check if BioBridge Integration has been enabled and configured. If it has not been configured, the application will display the message “BioBridge integration has not been enabled and configured” and you will need to go back to MorphoManager/Administration/System Configuration/BioBridge to configure it properly.

If BioBridge integration is configured the application will display a user management screen. The screen will consist of a toolbar and a data grid.

### Toolbar

The toolbar will have the following items:

- Enroll
- Edit
- Encode Card
- Filter
- Refresh
- Search Field

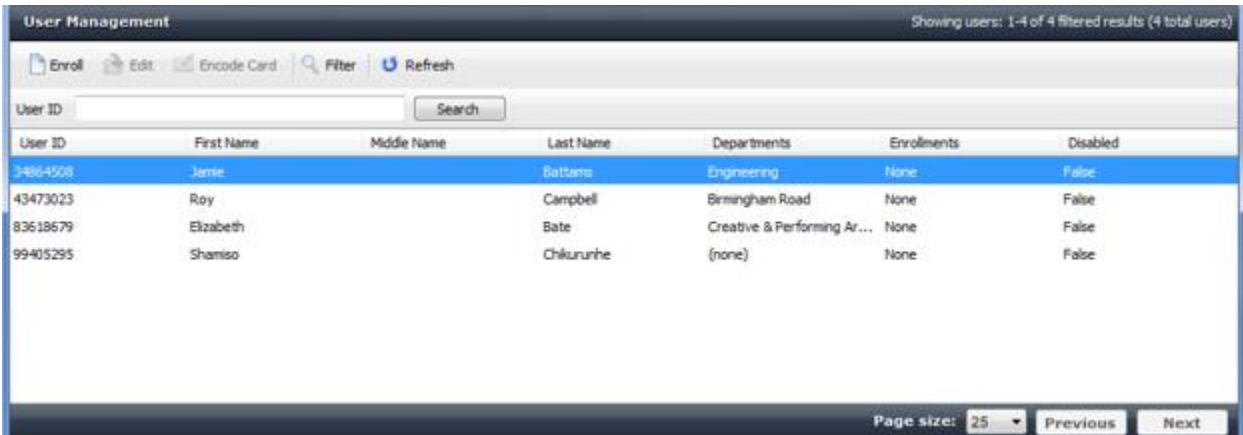

The screenshot shows the 'User Management' interface. At the top right, it says 'Showing users: 1-4 of 4 filtered results (4 total users)'. The toolbar includes buttons for 'Enroll', 'Edit', 'Encode Card', 'Filter', and 'Refresh'. Below the toolbar is a search field labeled 'User ID' with a 'Search' button. The main area is a table with the following data:

User ID	First Name	Middle Name	Last Name	Departments	Enrollments	Disabled
34864508	Jamie		Batters	Engineering	None	False
43473023	Roy		Campbell	Birmingham Road	None	False
83618679	Elizabeth		Bate	Creative & Performing Ar...	None	False
99405295	Shamiso		Chikunhe	(none)	None	False

At the bottom right, there is a 'Page size: 25' dropdown and 'Previous' and 'Next' buttons.

### Enroll

Enroll will start the enrollment of the selected user. The enrollment process will be derived from the standard MorphoManager user add/edit wizard with the following pages (For details on the enrollment process please see the User Management section of the MorphoManager User Manual):

- Authentication Type (Only if more than one mode is configured)
- 3D Face Selection
- 3D Face Enrollment
- Finger Selection
- Finger Enrollment

If a card based authentication method is configured the operator will be prompted if they want to encode a card.

## Edit

Opens the already enrolled user details for viewing or editing.

## Encode Card

Encode card will display an animation of the card being presented to a SDI 011 and wait for the card encoding to complete or be cancelled.

## Filter

The screenshot shows a 'Filter' dialog box with the following components:

- User Details:** Four text input fields for 'First Name:', 'Middle Name:', 'Last Name:', and 'User ID:'. Below them are three radio buttons for 'Enabled:': 'Any' (selected), 'Enabled', and 'Disabled'.
- Sort By:** Three dropdown menus labeled 'Primary:', 'Secondary:', and 'Tertiary:'. The 'Primary:' dropdown is set to 'User ID Ascending', 'Secondary:' to 'Last Name Ascending', and 'Tertiary:' to 'First Name Ascending'.
- Departments:** A list of checkboxes. 'Select All' is checked and 'Clear All' is unchecked. The list includes: '(none)' (checked), 'Birmingham Road', 'Creative & Performing Arts - Art & Design', and 'Engineering'.
- Buttons:** Three buttons at the bottom right: 'Reset Filters' (with a refresh icon), 'OK' (with a green checkmark icon), and 'Cancel' (with a red X icon).

Filter will show a popup inline form that allows filtering on the following items:

- First Name
- Middle Name
- Last Name
- User ID
- Enabled/Disabled
- Departments

## Refresh

Refresh will update the data currently being shown using the currently set filter conditions.

## Search Field

The Search Field can be used to find individual users quickly and/or to migrate users from Paxton Net2 to the BioBridge Enrollment Client without waiting for a cache refresh.


## Data Grid

The data shown in the data grid is a combination of your system and MorphoManager. Only users that exist in your system will be shown. A MorphoManager user does not exist until the user is enrolled. By default, pagination is set for the first 25 BioBridge users to be shown. Operators may change the pagination to 25, 50, 100 & 250.

The data grid will have the following columns:

- User ID
- First name
- Middle name
- Last name
- Departments– All of the Department groups that your user is a member of in your system. (Comma separated values)
- Enrollments (None, Finger, Finger & 3D Face, 3D Face) (Derived from linked MorphoManager User)
- Disabled- A value of either True or False will be present.

Enrolled user will show their MorphoManager details in the “Show Details” panel below the data grid. This area will be blank if the user has not been enrolled.

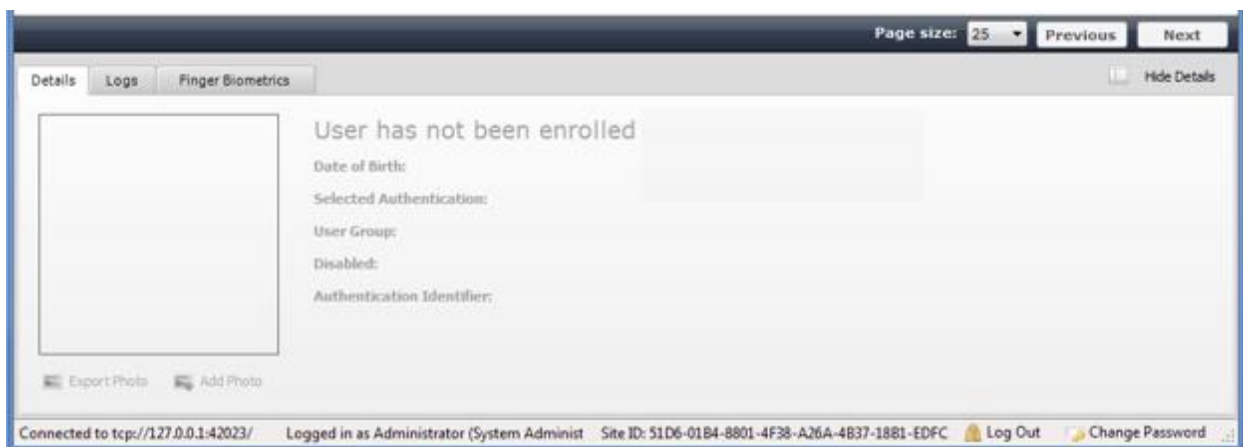

## Embedded enrollment setup

In order to launch the enrollment process from within Paxton Net 2 the following steps will need to be completed *after* completing the “Setting up Biobridge” section of this guide.

### Adding the “Add User and Enroll Biometrics” button to Paxton

To add and configure the “Add User and Enroll Biometrics” button so that it appears when creating a new user in Paxton Net 2, do the following:


- Go to the MorphoManager Client directory (default install of the MorphoManager Client will be C:\Program Files (x86)\Morpho\MorphoManager\Client).
- From the MorphoManager Client directory run the “ID1.MM.PaxtonNet2EnrollmentButton.exe”

Name	Date modified	Type	Size
ID1.ESP4.MorphoManager.ClientService.exe	11/15/2017 3:11 PM	Application	233 KB
ID1.MM.AMAGSymmetryStub.exe	11/15/2017 3:12 PM	Application	12 KB
ID1.MM.ContinuumStub.exe	11/15/2017 3:11 PM	Application	21 KB
ID1.MM.PaxtonNet2EnrollmentButton.exe	11/15/2017 3:12 PM	Application	47 KB
ID1.MM.RandomBiometricDeviceRebuilderTool.exe	11/15/2017 3:11 PM	Application	14 KB
ID1.TraceConfiguration.exe	8/25/2017 3:36 PM	Application	10 KB


This will launch to the PC’s System Tray. When this application is running, the “Add User and Enroll Biometrics” button will be available to use in Paxton Net2.

### Options for the Enrollment Application

- Once the application is running in the System Tray, right click it and choose **Options**.

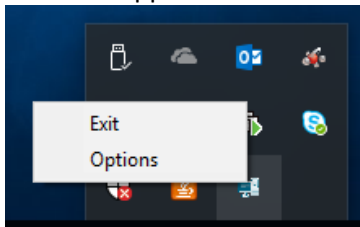

- From the Options menu select whether the application should start automatically each time the user logs into the PC. NOTE: This setting is per user login.

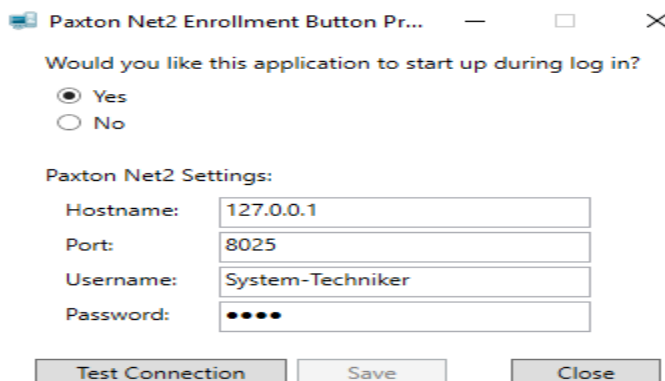

- From the Options menu the Paxton Net2 Connection Settings will also need to be configured and tested. These should be the same connection settings as used in configuring [BioBridge](#) earlier in the manual.

## Enrolling a user into MorphoManager via Paxton Net2

With the enrollment application running as described above an “Add User and Enroll Biometrics” button will now appear in the Add User window for Paxton. Make sure that all of the pertinent information that is needed to create a user is present and click **Add User and Enroll Biometrics**. This includes First name, Last name, Department, Access level, Token number, and Token type. Please note that the same Token type must be used as was selected in the configuration of [BioBridge](#) earlier in the manual in order to enrol the user into MorphoManager.

**Add user**
✕

Please select the type of token which you wish to issue

Token type

Default

▼
New type

<p>First name <input style="width: 100%;" type="text"/></p> <p>Middle name <input style="width: 100%;" type="text"/></p> <p>Surname <input style="width: 100%;" type="text"/></p> <p>Department <span style="border: 1px solid #ccc; padding: 2px;">(none) ▼</span></p> <p>Access level <span style="border: 1px solid #ccc; padding: 2px;">No access ▼</span></p> <p>Telephone <input style="width: 100%;" type="text"/></p> <p>Fax <input style="width: 100%;" type="text"/></p> <p>Valid from <span style="border: 1px solid #ccc; padding: 2px;">12/19/2017 ▼</span></p> <p>Expires end <span style="border: 1px solid #ccc; padding: 2px;">12/19/2017 ▼</span></p> <p>Address 1 <input style="width: 100%;" type="text"/></p> <p>Address 2 <input style="width: 100%;" type="text"/></p> <p>Town <input style="width: 100%;" type="text"/></p> <p>County <input style="width: 100%;" type="text"/></p> <p>Post code <input style="width: 100%;" type="text"/></p> <p>Home telephone <input style="width: 100%;" type="text"/></p> <p>Home Fax <input style="width: 100%;" type="text"/></p> <p>Mobile <input style="width: 100%;" type="text"/></p> <p>Card template <span style="border: 1px solid #ccc; padding: 2px;">▼</span></p>	<p style="text-align: center; margin-bottom: 10px;"><span style="border: 1px solid #ccc; padding: 2px;">Get picture</span></p> <div style="border: 1px solid #ccc; height: 100px; width: 100%;"></div> <p>Email <input style="width: 100%;" type="text"/></p> <p>Position <input style="width: 100%;" type="text"/></p> <p>Start date <input style="width: 100%;" type="text"/></p> <p>Car registration <input style="width: 100%;" type="text"/></p> <p>Notes <div style="border: 1px solid #ccc; height: 40px; width: 100%;"></div></p> <p>Personnel number <input style="width: 100%;" type="text"/></p> <p>PIN <input style="width: 100%;" type="text"/> <span style="margin-left: 5px; border: 1px solid #ccc; padding: 2px;">Auto PIN</span></p> <p>Token number <input style="width: 100%;" type="text"/></p> <p>Token type <span style="border: 1px solid #ccc; padding: 2px;">Unspecified ▼</span></p>	<p style="text-align: center; margin-bottom: 10px;"><span style="border: 1px solid #ccc; padding: 5px; background-color: #0070c0; color: white;">Add user and Enroll biometrics</span></p>
--	---	--

When I click 'Add user' reload the token type default values

When I click 'Add user' retain the previous record values

Close
Add user

Once the button is clicked, it will generate the user in Paxton Net2 and launch the enrollment process into MorphoManager as mentioned in the Using the BioBridge Enrollment Client section of this guide.