

QR CODE FOR THE MWC



STRONGLY ADVICE

IF UNFAMILIAR WITH THE MORPHOWAVE COMPACT?
PLEASE REVIEW PDF ON SIMPLE SET UP BEFORE HAND

[HTTP://SERVICE.MORPHOTRAK.COM/SUPPORT.HTML](http://service.morphotrak.com/support.html)

MorphoWave Compact

MorphoWave Compact Simple set up

ACRONYMS

MWC=MORPHO WAVE COMPACT

UP=USER POLICY

BDP=BIOMETRIC DEVICE PROFILE

MM=MORPHO MANAGER

MORPHOMANAGER DEFAULT LOG IN

USERNAME-ADMINISTRATOR

PASSWORD-PASSWORD

QR CODE

REQUIREMENTS TO READ QR CODES

- FIRMWARE 1.4.0
- MORPHO MANAGER 13.5.3 AND HIGHER
- A QR CODE PROGRAM MAKER(NOT SUPPLIED)

ADD AN BIOMETRIC DEVICE

Administration>Biometric Device

Biometric devices from three different hardware families can be added here; the MA 100, MA J, MA 500, and MA VP family, the MA Sigma, MA Sigma Lite And MA Sigma Lite + MA Sigma Extreme, the Morpho 3D Face, the MorphoWave Tower, MorphoWave Compact, and the Morpho Tablet Terminal.

ADD THE MWC AS THE EXAMPLE BELOW

Home Administration User Management Biometric Identification Access Logs Reports

Items

- Operator
- Key Policy
- Biometric Device Profile
- Biometric Device**
- Wiegand Profiles
- User Policy
- Access Schedules
- User Distribution Group
- User Authentication Mode
- Operator Role
- Notifications

Adding Biometric Device

Enter the details for this Biometric Device

Name: Morphowave Compact

Description:

Location:

Asset ID:

Export Value:

Time Zone: (UTC-08:00) Pacific Time (US & Canada)

Hardware Family: MorphoWave Tower, MorphoWave Compact

Serial Number:

Hostname\IP Address: 192.168.1.10

Port: 11010

Biometric Device Profile: Default

Include in Time & Attendance Exports:

Change User Onsite / Offsite Status:

Onsite Key: No Key

Offsite Key: No Key

Finish

BIOMETRIC DEVICE PROFILE



Biometric Device
Profile

Path Administration>Biometric Device Profile

The Biometric Device Profile will define common settings and parameters for one or more biometric devices. This profile can be applied when adding units into the system from the Biometric Device section of Administration

BIOMETRIC DEVICE PROFILE

CREATE OR EDIT THE BIOMETRIC DEVICE PROFILE

Operator

Key Policy

Biometric Device Profile

Biometric Device

Wiegand Profiles

User Policy

Access Schedules

User Distribution Group

User Authentication Mode

Enter details for the Biometric Device Profile

Name:

Description:

Configuration Mode:

Log retrieval Enabled:

Log retrieval interval: (seconds)

Duplicate check on biometrics: (Does not apply to Morpho 3D Face or MorphoTablet. Only applicable to new user adds or rebuild operations)

MorphoAccess heartbeat interval: (seconds)

Key Policy:

MA Sigma, MA Sigma Lite, MA Sigma Lite+, MA Sigma Extreme, MA Sigma VP Only Settings

Allow Remote Enrollment:

Default User Policy for Remote Enrollment:


Next





Next

BIOMETRIC DEVICE PROFILE

THERE IS NO CHANGES NEED TO TAKE PLACE IN THE BDP EXCEPT FOR CUSTOM PARAMETERS.

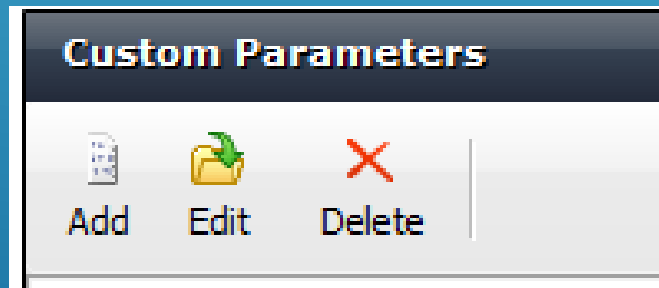


HIT NEXT SEVERAL TIMES TILL YOU GET TO CUSTOM PARAMETERS

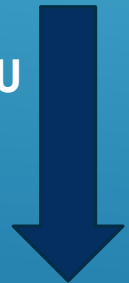

BIOMETRIC DEVICE PROFILE

Name	Value
ucc.trigger_event	16

ADD ONE PARAMETERS THIS IS CASE SENSITIVE
UCC.TRIGGER_EVENT VALUE OF 16



FINAL RESOLUTION

WITH YOUR QR CODE YOU CAN NOW USE THE MWC FOR ACCESS

NO HANDS VERIFY CAN TAKE PLACE WITH THIS CONFIGURATION

THE QR CODE IDENTIFIER WOULD HAVE TO EXIST IN YOUR ACP

WEBSITE

Please visit our website,
service.morphotrak.com for
software, firmware, videos and
PDF'S